

Deflection Indicator DI-5



Instruction for use - Crankshaft measurement

1. Ensure that the cable is properly connected.
2. Select the applicable extension bar(s). Don't fit the transducer yet.
3. Push POWER button and hold shortly.
Check the battery level when battery symbol show up.
If battery level is low charge the battery with the enclosed charger.
Follow the Charger manual. (**Note! Use only this charger**)
4. Push LIGHT button if needed.
(the backlight LEDs will light for 15 sec after every button push)
5. Push RESET button
6. Fit the transducer between the webs in the punch marks.
Adjust the screw ring to a reading close to zero and lock it with the locking ring.
7. Push ZERO button.
8. Rotate crankshaft and check deflection by normal procedure.
9. Note the results, and keep them to compare with the next measurements.
10. Remove the transducer by pressing it to one side.
NOTE! It is normally unnecessary to unlock the adjuster.
11. Fit the transducer into the next crank web position.
12. Repeat the procedure from step 6.

NOTE! If the DI-5 not is used for a long time it's necessary to charge the battery at least once a year.